

Backlit Icon	Name and Description	LED Behavior and States
≒	Connectivity - USB Host, USB Device, Serial, Parallel, Wireless 802.11, Bluetooth, Ethernet	Flashing White = Sending or receiving data. Off = No data is being transferred.
	Wireless 802.11	White = Wireless is enabled. Off = Wireless disabled or not installed.
*	Bluetooth	White = Bluetooth is enabled. Off = Bluetooth is disabled or not installed.
¶.)	Media	On Red = Media is out or there is a problem with the paper (jammed, not loaded correctly). If the printer has a Label Taken Sensor installed and enabled, the Media icon is lit when a label has been printed, but not yet removed/torn off by the user. Off = Media is not having issues.
•••	Ribbon	On Red = Ribbon is out or there is a problem with the ribbon (not feeding, not loaded correctly, or the printer has ribbon installed but is not configured for ribbon). Off = No error or the printer is not configured to use ribbon.
1	Cover Open	On Red = The cover is open and/or not properly latched. Off = The cover is correctly positioned.
II	Pause	On White = The printer is paused. Off = The printer has not been paused.
\triangle	General Error	Red = Indicates a general problem that is not covered by one of the other backlit icons Off = No error.
<u>\\\\</u>	Thermal Printhead Hot	Red = The thermal printhead is too hot. The backlit icon shall automatically turn off when the printer is ready for use again. Off = No error.
2/2	Maintenance	Amber = Indicates that maintenance is required and a product odometer setting has been reached. The odometer settings values can be modified by the customer. The odometer settings can also be disabled. Flashing Amber = Indicates the firmware is being upgraded, or that the printer is restoring defaults or in calibration mode. Once complete, the LED shall turn off.
		Off = No maintenance is required.

